 
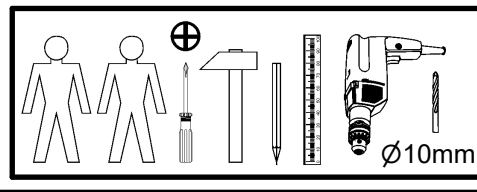 
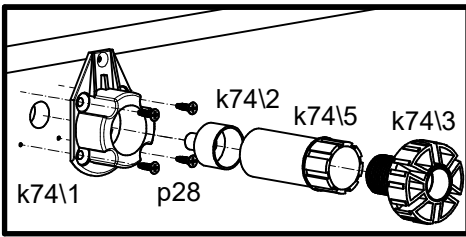 
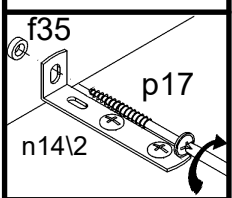 
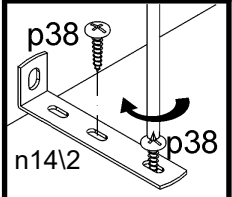 
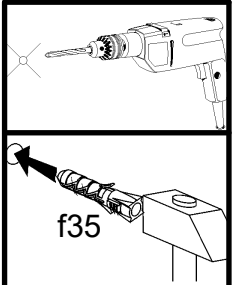 
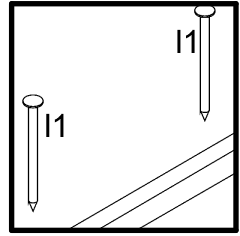 
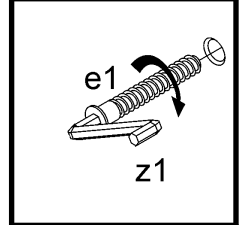 
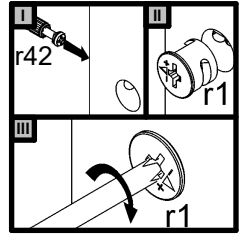 
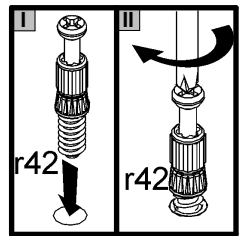 
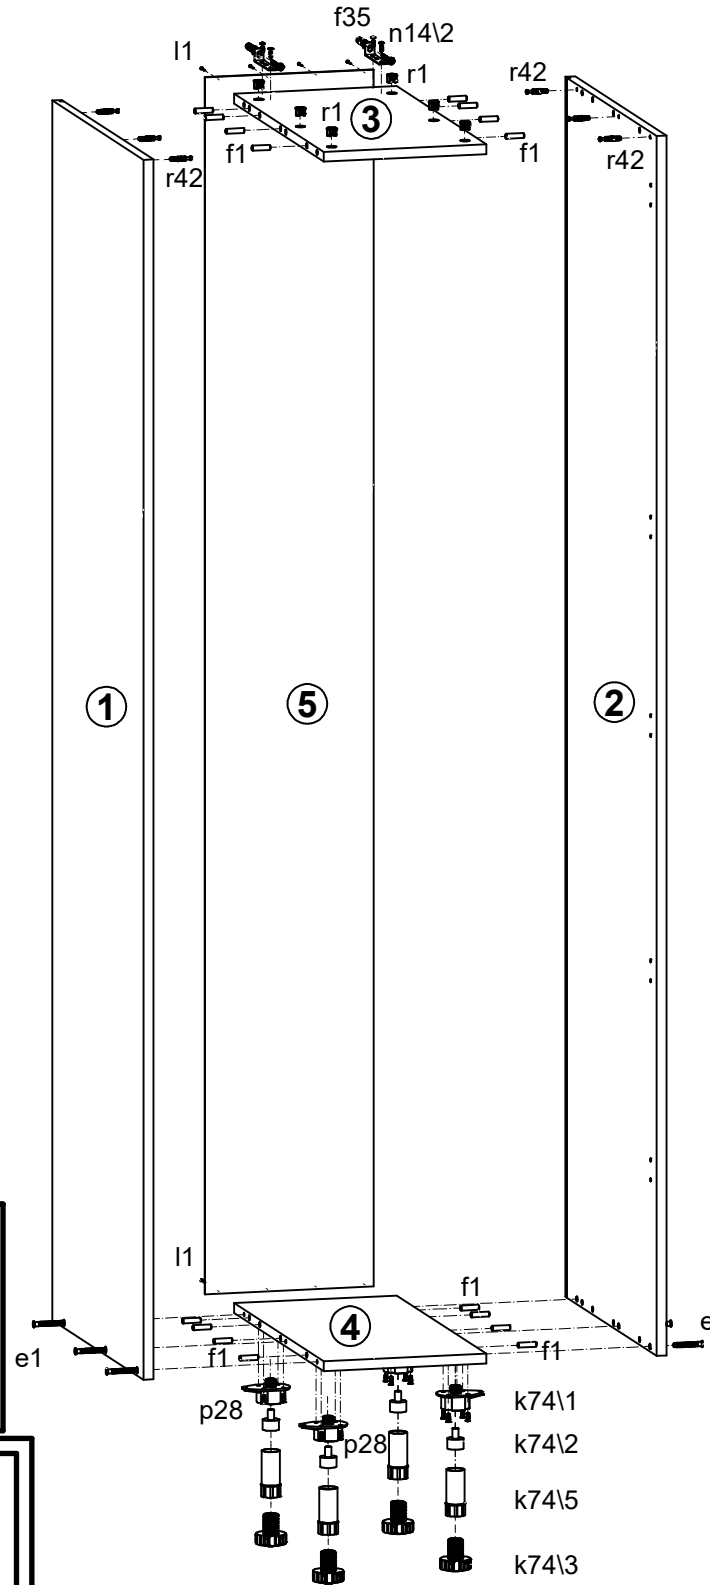 
 


A

Senso

K31-DC-30/207

A	B	C	D	
1	K31-1219	1966	560	1/1
2	K31-1220	1966	560	1/1
3	K31-3053	267	550	1/1
4	K31-3140	267	550	1/1
5	K31-9042	1961	277	1/1

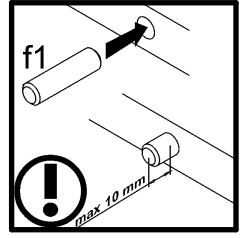

6x Ø7x50 mm e1	16x Ø8x30 mm f1	2x Ø10x50 mm f35	4x k74/1	4x k74/2	4x k74/3	8x Ø3,5x16 mm p38
4x L-73 mm k74/5	2x k66/4	10x l1	2x 86x21x15/1,5 n14/2	4x Ø3,5x13 mm p1	2x Ø5x60 mm p17	6x M4x12 mm j45/1
16x Ø4x13 mm p28	4x Ø3,5x16 mm p38	6x Ø15x12 mm #16 r1	6x 20/11 r42	1x z1		3x j45/2
						2x silikon o21
						2x n176