 
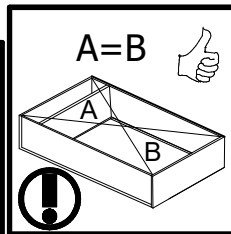 
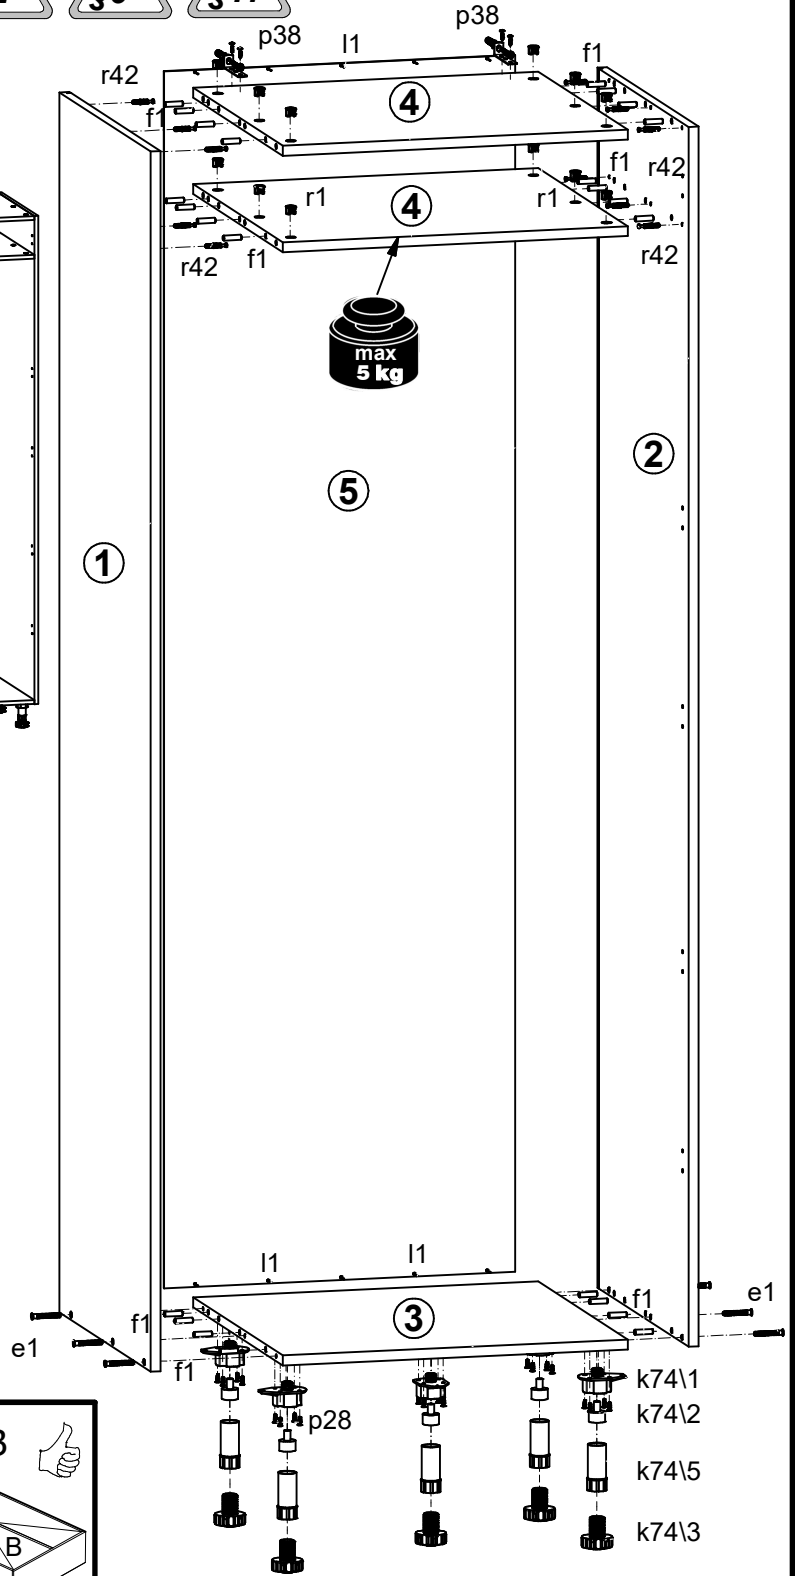 
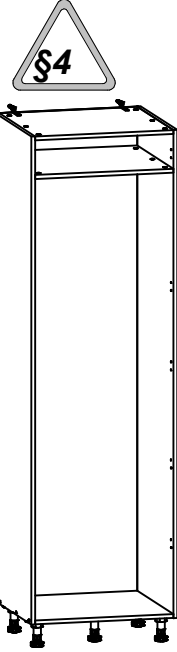 
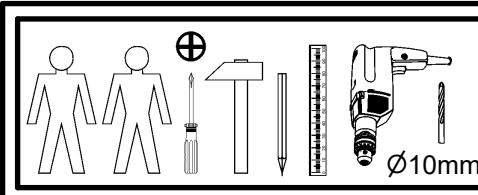 
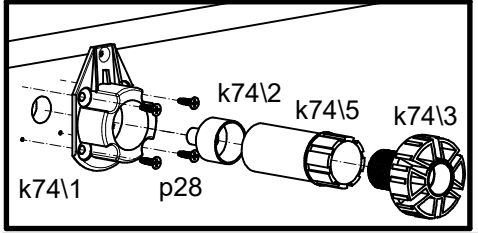 
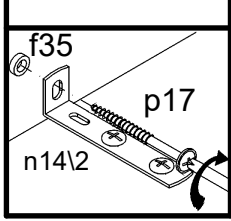 
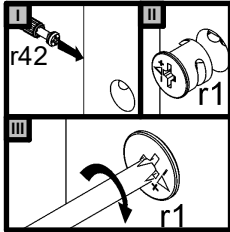 
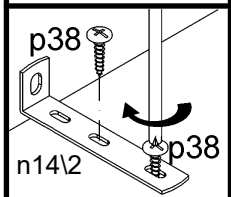 
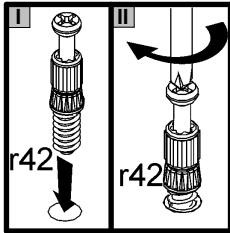 
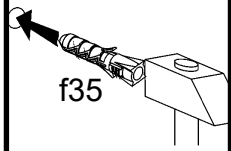 
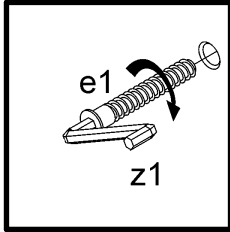 
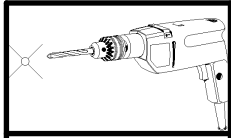 
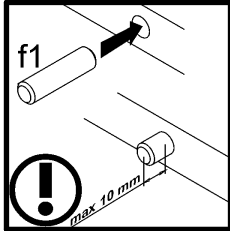 


A

Senso

K31-DC-60/207

A	B	C	D	
1	K31-1028	1966	560	1/1
2	K31-1029	1966	560	1/1
3	K31-3025	567	550	1/1
4	K31-3139	567	550	1/1
5	K31-9012	1961	577	1/1

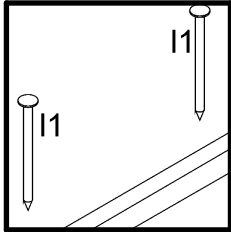

6x Ø7x50 mm e1	24x Ø8x30 mm f1	2x Ø10x50 mm f35	2x k66/4	5x k74/1	5x k74/2	5x k74/3	5x L-73 mm k74/5	15x I1
2x 86x21x15/1.5 n14/2	4x Ø3,5x13 mm p1	2x Ø5x60 mm p17	20x Ø4x13 mm p28	4x Ø3,5x16 mm p38	6x M4x12 mm j45/1	3x j45/2	2x n176	
12x Ø15x12 mm #16 r1	12x 20/11 r42	1x z1				6x silikon o21	8x Ø3,5x16 mm p38	