

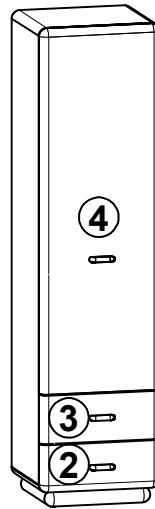
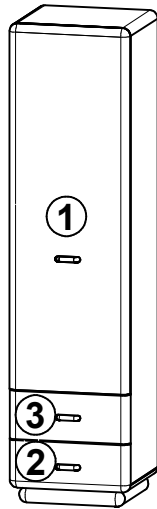


# TAURI

# S59-REG1D2S/19/5-FR1

A	B	C	D
1	S59-011	1476	496
2	S59-012	496	196
3	S59-014	496	196

A	B	C	D
4	S59-022	1476	496

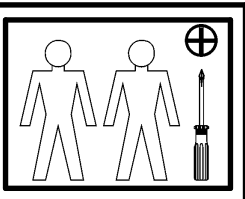

**1**

Warning symbols: §2, §6

Parts shown: a58, b20, c242, p11, p79, r16, r15

Assembly steps:

- Attach screws p11 and r16 to the front panel (3) and cabinet body (2).
- Attach the door (4) to the cabinet body (2) using screws a58, b20, p11, and p79.

Warning symbol §10: A triangle with a circle containing the number 10.