


THE ASSEMBLY MANUAL

Attention: Before you start the assembly, please get acquainted with the entire assembly manual and stick to the order of assembly presented in this manual.


TOLEDO RANGE

Chest 5+2drw

Symbol elementu Značka dílu Element symbol Jel elemek Symbol elementu	Wymiary Rozměry Measurements Nagyság Rozmery	Kód Kód Code Kód Kód	Paczka Krabica Paket Csomagban Balik
1	954x152	S54-002	2/2
2	476x152	S54-003	2/2
3	476x152	S54-004	2/2
4	139x397	S54-105	2/2
5	1001x417	S54-106	1/2
6	1001x417	S54-107	1/2
7	960x447	S54-203	1/2
8	926x70	S54-403	2/2
9	320x100	S54-517	2/2
10	320x100	S54-518	2/2
11	895x100	S54-521	2/2
12	424x100	S54-522	2/2
13	906x320	S54-904	1/2
14	435x320	S54-907	1/2
15	1007x935	S54-909	1/2

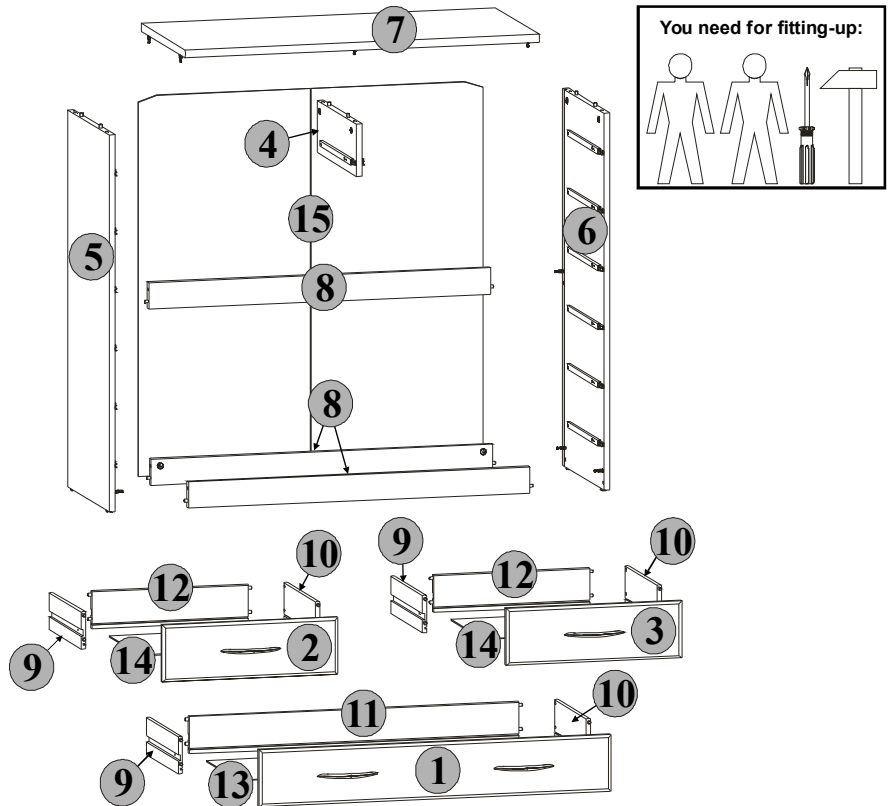

The symbols and the amount of accessories needed for the assembly have been presented below. The accessories can be found in the "Accessories" package.

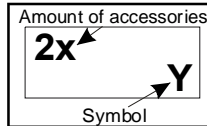


12x c78	68x f1 ø8x30 mm	14x M4x9 mm j2	24x M4x22 mm j30	4x k1	12x l2	1x 20x13x3.5/1 mm n108
42x ø3.5x13 mm p1	5x ø3.5x16 mm p25	5x ø3.5x10 mm p35	6x ø3.5x16 mm p38	1x ø2.9x16 mm p55	12x ø15x12mm #16 r1	12x r16
3x ø16 s2	5x 320 mm t4	14x 310 mm w4	1x y1	1x z1		

<input type="checkbox"/> TAŚMA ZABEZPIECZAJĄCA
<input type="checkbox"/> ОБОЗОПАСИТЕЛЬНА ЛЕНТА
<input type="checkbox"/> ZAJIŠTŮJÍCÍ PÁSKA
<input type="checkbox"/> DAS SICHERU...
<input type="checkbox"/> BANDE DE SURETE
<input type="checkbox"/> THE ANTI-TOPPLE DEVICE
<input type="checkbox"/> ZÁS TITNA TRÁKA
<input type="checkbox"/> BIZTOSÍTÓ SZALAG
<input type="checkbox"/> BANDE DE SIGURANTA
<input type="checkbox"/> ПРЕОХРАНИТЕЛЬНАЯ ЛЕНТА
<input type="checkbox"/> OCHRANNÁ PÁSKA
<input type="checkbox"/> 3.5x16 mm
<input type="checkbox"/> 1x p38
<input type="checkbox"/> 1x n26

General instructions for furniture assembly

Attention

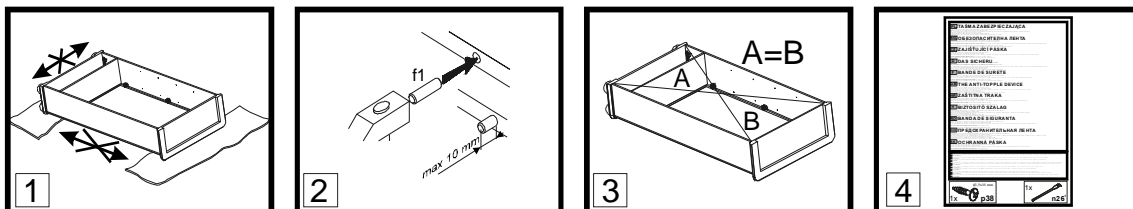

Attention:

- During the assembly, the elements should be put on a soft and clean surface, e.g. a towel or a blanket. Do not assemble the piece on a carpet or floor covering, etc.
- Drive f1 pegs into the holes (8 mm in diameter) located along the edges of each element (leave the holes for the eccentric connector pivot free). **Attention:** In case a peg in one of the holes protrudes more than 10 mm, it should be hammered down, exchanged or shortened because it may cause damage to the side of the piece of furniture during its assembly.
- Before nailing a fiberboard, make sure that the diagonals are equal.
- The anti-topple device. When assembling the furniture follow the instructions in the manual. Improper fixing of the piece of furniture may cause it to topple when it is used.


INFORMATION!

Dear client, in case of complaining, please use the code number given in the assembly instruction. Any comments and complaints should be reported at the furniture purchase outlet. **Note!** Do not use any parts showing any faults or marks of damage.




Assemble the unit as shown in the pictures using indicated connectors and/or joints.



2 TOL52C

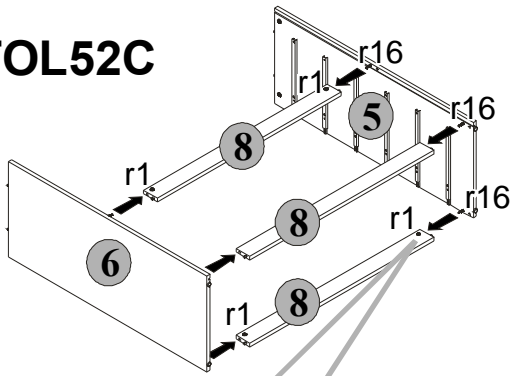



You need for fitting-up:

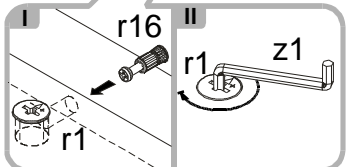




3 TOL52C

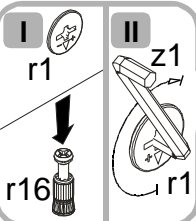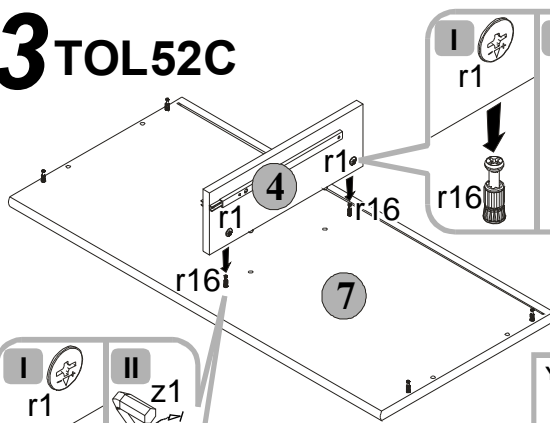


You need for fitting-up:









4 TOL52C

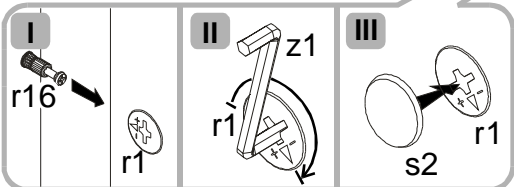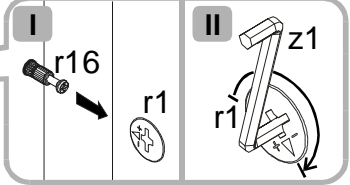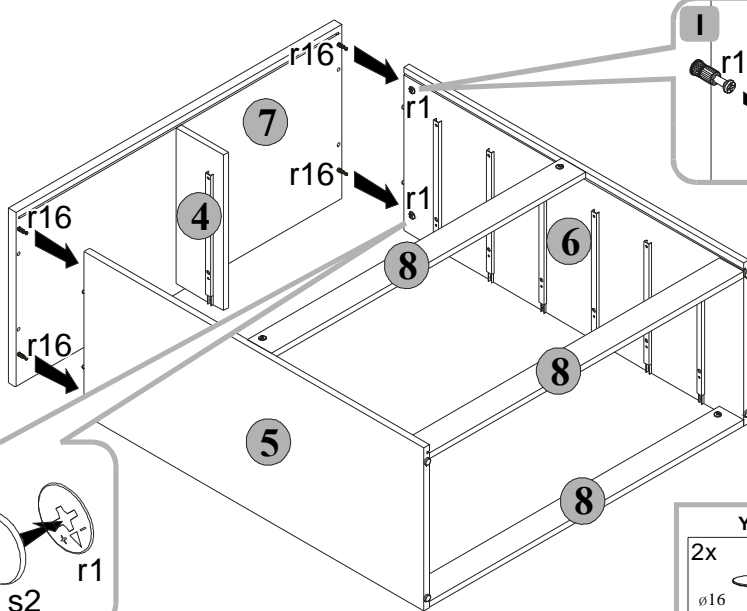




You need for fitting-up:



5 TOL52C

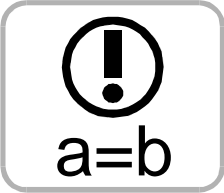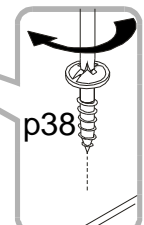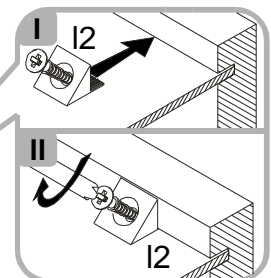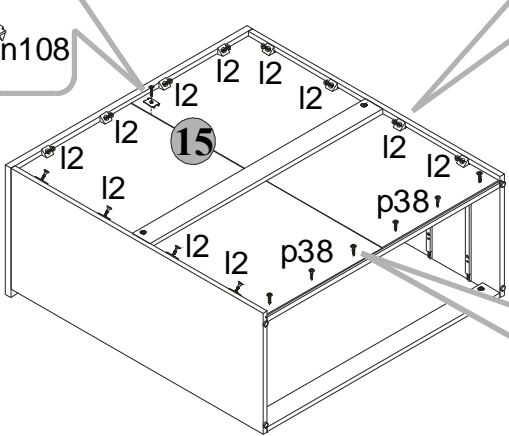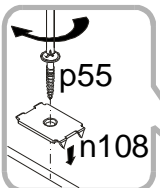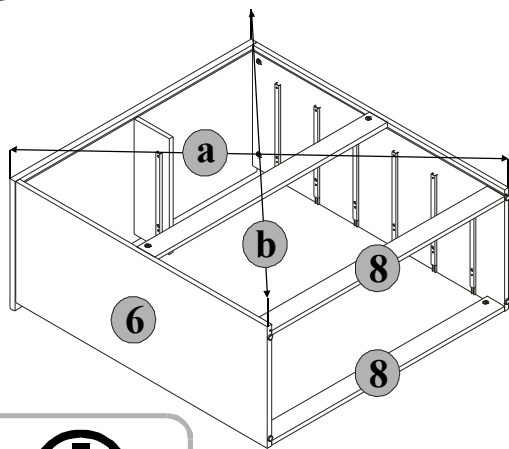

You need for fitting-up:



6 TOL52C

I

You need for fitting-up:

56x		1x	
	φ8x30 mm		y1

II

You need for fitting-up:

1x	
	y1

III

You need for fitting-up:

12x		24x		1x	
	c78		M4x22 mm		y1

IV

V

You need for fitting-up:

5x		5x		5x	
	φ3,5x16 mm		φ3,5x10 mm		320 mm

7 TOL52C

You need for fitting-up:

14x	
	M4x9 mm