

## THE ASSEMBLY MANUAL,


Attention: Before you start the assembly, please get acquainted with the entire assembly manual and stick to the order of assembly presented in this manual.

# TOLEDO RANGE Wardrobe 2d2s

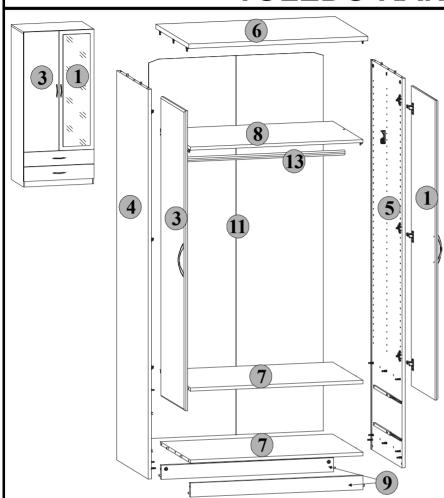


Element symbol	Measurements	Code	Paket
1	1499x452	S44-008	3/3
2	908x184	S44-009	2/3
3	1499x452	S44-014	3/3
4	1948x595	S44-108	1/3
5	1948x595	S44-109	1/3
6	914x625	S44-206	2/3
7	880x574	S44-302	2/3
8	880x574	S44-321	2/3
9	880x70	S44-407	2/3
10	1833x100	S44-523	1/3
11	1891x889	S44-913	1/3
12	859x481	S44-914	1/3
13	867x24	dr-867	2/3

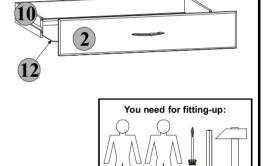


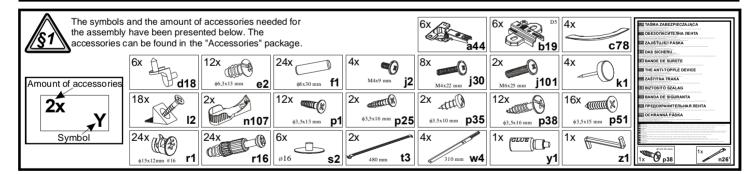


# General instructions for furniture assembly

## **Attention**









#### Attention:

- 1. During the assembly, the elements should be put on a soft and clean surface, e.g. a towel or a blanket. Do not assemble the piece on a carpet or floor covering, etc.

  2. Drive f1 pegs into the holes (8 mm in diameter) located along the edges of each element (leave the holes for the eccentric connector pivot free). Attention: In case a peg in one of the holes protrudes more than 10 mm, it should be hammered down, exchanged or shortened because it may cause damage to the side of the piece of furniture during its assembly
- 3. Before nailing a fiberboard, make sure that the diagonals are equal.
- 4.The anti-topple device. When assembling the furniture follow the instructions in the manual. Improper fixing of the piece of furniture may cause it to topple when it is used. INFORMATION!

Dear client, in case of complaining, please use the code number given in the assembly instruction. Any comments and complaints should be reported at the furniture purchase outlet. Note! Do not use any parts showing any faults or marks of damage.

P28-S44-WR 2d2s-M IN11-KOR02



